




## 396-4 & 397-3 Manual Instruction

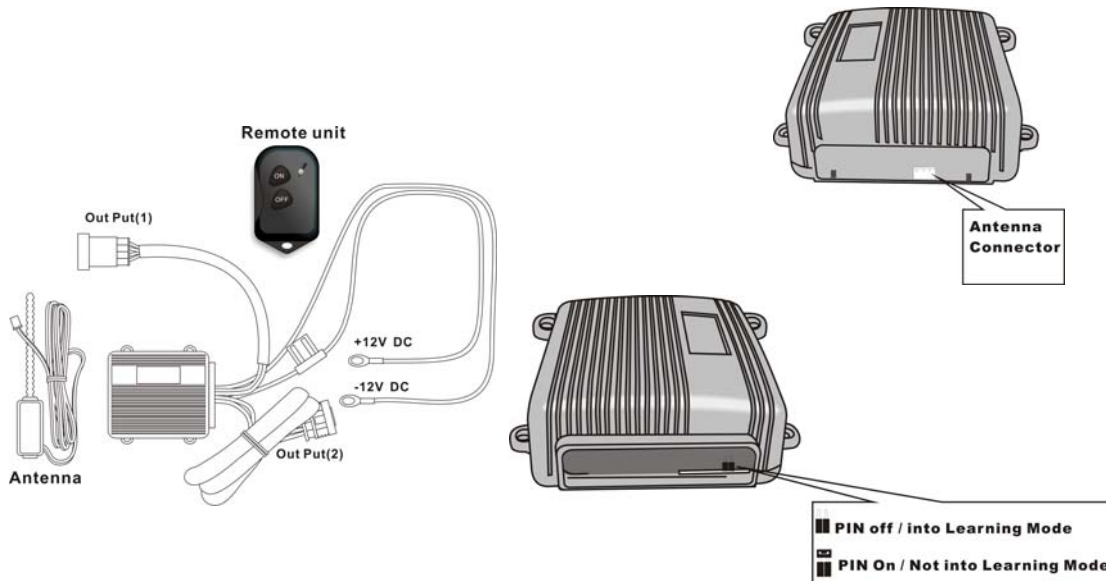

### Wireless Remote Comes Preprogrammed

#### Installation

- 1.) Connect Out Put 1 to Power Unit
- 2.) Mount Wireless receiver
  - a. Select desired mounting location preferably in a sealed box and out of harms way
  - b. Antenna must be mounted outside, not in metal box.
- 3.) Connect Positive (*Red*) & Negative (*Black*) Ring Terminals to Power Unit not Battery
  - a. Insure Power Unit has a designated ground wire
- 4.) Operate wireless unit to insure Unit is operating properly

#### Function

- 1.) This device is activated by pushing either button 1 or 2 to power the unit.
- 2.) 20 Minute shut off (receiver shuts down after being idle for 20 minutes)
  - a. Press both buttons 1 & 2 for 10- 20 seconds to end Shutdown Mode
  - b. When in Shutdown Mode, Wireless receiver is the only item shutdown, Out Put 2 is still active
- 3.) Operating Frequency: 315MHz

#### How to operate the Remote Learning mode

- 1.) Remove wired hand control to prevent accidental operation.
- 2.) Disconnect Positive (*Red*) & Negative (*Black*) Ring Terminals
- 3.) Remove program pin from the receiver to start Learning Mode.
- 4.) Reconnect Positive (*Red*) & Negative (*Black*) Ring Terminals (*Receiver will click*)
- 5.) Press either button 1 or 2 (*receiver will click 2 to 9 times depending on how long you hold the button down*)
- 6.) Replace program pin on the receiver to end Learning Mode.

*(When in learning mode Remote Unit must be operated within 3-5 seconds to learn new code. Otherwise the device will jump back and resume previous frequency.)* **Unit may not operate below 11 Volts**